



MIDEA 50Hz
PORTABLE
PH SERIES



CONTENTS

■ 1. Precaution.....	1
■ 1.1 Safety Precaution.....	1
■ 1.2 Warning.....	1
■ 2. Model Lists	6
■ 3. Function and control panel.....	6
■ 3.1 Function	6
■ 3.2 Control panel	7
■ 4. Dimension.....	9
■ 5. Refrigerant Cycle Diagram.....	10
■ 6. Wiring Diagram.....	11
■ 7 Electronic function.....	13
■ 7.1 Terms and definitions	13
■ 7.2 Electric Control working environment.....	13
■ 7.3 Protection function	13
■ 7.4 Fan-only mode function requirement	13
■ 7.5 Cooling mode function requirement.....	13
■ 7.6 Drying mode	14
■ 7.7 Some standard functions synopsis	15
■ 8 Installation details	16
■ 8.1 Installation instructions.....	16
■ 8.2 Care and maintenance.....	21
■ 9 Basic test procedure.....	23
■ 9.1 Defective compressor	23
■ 9.2 Sealed refrigeration system repairs.....	25
■ 9.3 Fan motor.....	27
■ 9.4 Capacitor.....	28
■ 10 Characteristic of temperature sensor	29
■ 11 Troubleshooting	30
■ Error codes and Solution	31

■ 1. Precaution

■ 1.1 Safety Precaution.

- **To prevent injury to the user or other people and property damage, the following instructions must be followed.**
- **Incorrect operation due to ignoring instruction will cause harm or damage.**
Before service unit, be sure to read this service manual at first.

■ 1.2 Warning

Installation

- **Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.**
There is risk of fire or electric shock.
- **For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized service center.**
Do not disassemble or repair the product, there is risk of fire or electric shock.
- **Always ground the product.**
There is risk of fire or electric shock.
- **Install the panel and the cover of control box securely.**
There is risk of fire of electric shock.
- **Always install a dedicated circuit and breaker.**
Improper wiring or installation may cause fore or electric shock.
- **Use the correctly rated breaker of fuse.**
There is risk of fire or electric shock.
- **Do not modify or extend the power cable.**
There is risk of fire or electric shock.
- **Do not install, remove, or reinstall the unit by yourself(customer).**
There is risk of fire, electric shock, explosion, or injury.
- **Be caution when unpacking and installing the product.**
Sharp edges could cause injury, be especially careful of the case edges and the fins on the condenser and evaporator.
- **For installation, always contact the dealer or an Authorized service center.**
There is risk of fire, electric shock, explosion, or injury.
- **Do not install the product on a defective installation stand.**

It may cause injury, accident, or damage to the product.

- **Be sure the installation area does not deteriorate with age.**

If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

- **Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.**

Moisture may condense and wet or damage furniture.

- **Take care to ensure that power cable could not be pulled out or damaged during operation.**

There is risk of fire or electric shock.

- **Do not place anything on the power cable.**

There is risk of fire or electric shock.

- **Do not plug or unplug the power supply plug during operation.**

There is risk of fire or electric shock.

- **Do not touch (operation) the product with wet hands.**

There is risk of fire or electric shock.

- **Do not place a heater or other appliance near the power cable.**

There is risk of fire and electric shock.

- **Do not allow water to run into electric parts.**

It may cause fire, failure of the product, or electric shock.

- **Do not store or use flammable gas or combustible near the product.**

There is risk of fire or failure of product.

- **Do not use the product in a tightly closed space for a long time.**

Oxygen deficiency could occur.

- **When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.**

Do not use the telephone or turn switches on or off. There is risk of explosion or fire.

- **If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.**

There is risk of electric shock or fire.

- **Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.**

There is risk of property damage, failure of product, or electric shock.

- **Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the**

unit is so equipped.)

There is risk of physical injury, electric shock, or product failure.

- **When the product is soaked (flooded or submerged), contact an Authorized service center.**

There is risk of fire or electric shock.

- **Be caution that water could not enter the product.**

There is risk of fire, electric shock, or product damage.

- **Ventilate the product from time to time when operating it together with a stove, etc.**

There is risk of fire or electric shock.

- **Turn the main power off when cleaning or maintaining the product.**

There is risk of electric shock.

- **When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.**

There is risk of product damage or failure, or unintended operation.

- **Take care to ensure that nobody could step on or fall onto the outdoor unit.**

This could result in personal injury and product damage.

Caution

- **Always check for gas (refrigerant) leakage after installation or repair of product.**

Low refrigerant levels may cause failure of product.

- **Install the drain hose to ensure that water is drained away properly.**

A bad connection may cause water leakage.

- **Keep level even when installing the product.**

To avoid vibration of water leakage

- **Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.**

It may cause a problem for your neighbors.

- **Use two or more people to lift and transport the product.**

Avoid personal injury.

- **Do not install the product where it will be exposed to sea wind (salt spray) directly.**

It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

Operational

- **Do not expose the skin directly to cool air for long periods of time. (Do not sit in the draft).**

This could harm to your health.

- **Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigerant system**

There is risk of damage or loss of property.

- **Do not block the inlet or outlet of air flow.**

It may cause product failure.

- **Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.**

There is risk of fire, electric shock, or damage to the plastic parts of the product.

- **Do not touch the metal parts of the product when removing the air filter. They are very sharp.**

There is risk of personal injury.

- **Do not step on or put anything on the product. (outdoor units)**

There is risk of personal injury and failure of product.

- **Always insert the filter securely. Clean the filter every two weeks or more often if necessary.**

A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

- **Do not insert hands or other object through air inlet or outlet while the product is operated.**

There are sharp and moving parts that could cause personal injury.

- **Do not drink the water drained from the product.**

It is not sanitary could cause serious health issues.

- **Use a firm stool or ladder when cleaning or maintaining the product.**

Be careful and avoid personal injury.

- **Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.**

There is risk of fire or explosion.

- **Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.**

They may burn or explode.

- **If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.**

The chemical in batteries could cause burns or other health hazards

Warning

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that the refrigerants may not contain an odour.
- Appliance should be installed, operated and stored in a room with a floor area larger than 12 m².
- Compliance with national gas regulations shall be observed.
- Keep ventilation openings clear of obstruction.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- A warning that the appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.



■ 2. Model Lists


	Capacity(Btu/h)	Model
ON/OFF	5k	MPPHA-05CRN7-QB6
	7k	MPPH-07CRN7-QB6G1
		MPPHA-07CRN7-QB6
	8k	MPPH-08CRN7-QB6
		MPPHB-08CRN7-QB6-N
	9k	MPPH-09CRN7-QB6
		MPPHB-09CRN7-QB6-N

■ 3. Function and control panel

■ 3.1 Function

- ※ Operation mode: Cooling, Dry Fan-only and Auto.
- ※ Auto swing function
- ※ Timer function
- ※ No bucket design.
- ※ LED display(remote controller)
- ※ Sleep mode
- ※ Air flow direction adjustment
- ※ Wait 3 minutes before resuming operation
- ※ Auto-restart(on some models)
- ※ Self-diagnosis and auto-protection function.
- ※ Anti-freezing control in cooling or drying mode
- ※ Time delay safety, restarting is for approx. 3 minutes on cooling

■ 3.2 Control panel

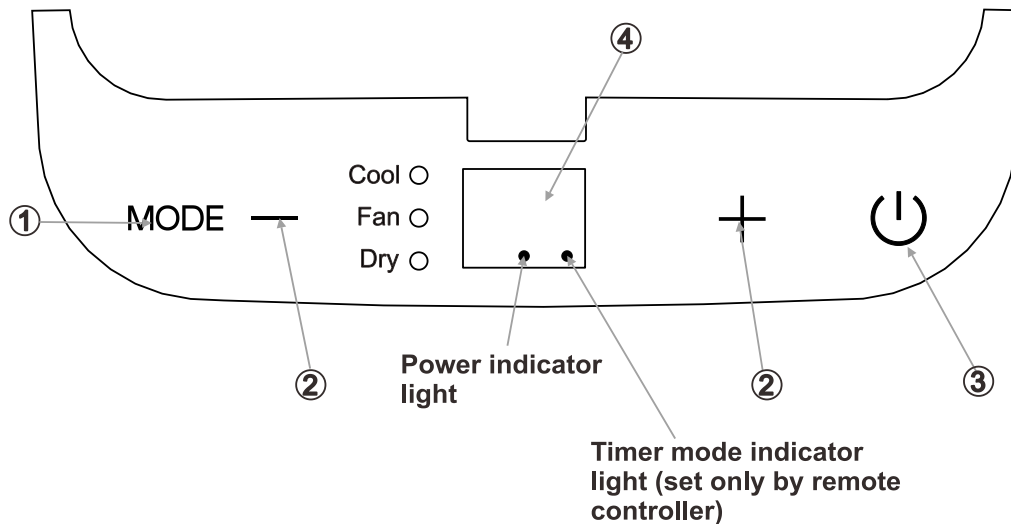

① Mode select button

Selects the appropriate operating mode. Each time you press the button, a mode is selected in a sequence that goes from COOL, DRY, FAN. The mode indicator light illuminates under the different mode setting

② Temperature/Time up / down buttons

Used to adjust (increasing/decreasing) temperature settings (1°C/2°F increments) in a range of 17°C (62°F) to 30°C (88°F) or the TIMER setting in a range of 0~24hrs.

③ ON-OFF button

Power switch on/off

④ LED display

Shows the set temperature while on cool mode. While on DRY and FAN modes, it shows the room temperature.

Error codes:

E0- Display board EEPROM parameter error-Unplug the unit and plug it back in. If error repeats, call for service.(for some models)

E1- Room temperature sensor error-Unplug the unit and plug it back in. If error repeats, call for service.

E2- Evaporator temperature sensor error- Unplug the unit and plug it back in.

If error repeats, call for service.

E4- Communication malfunction between main control board and display board-Unplug the unit and plug it back in.

If error repeats, call for service.

EC- Refrigerant leakage detection malfunction- Unplug the unit and plug it back in. If error repeats, call for service.

Protection codes:

P1- Bottom tray is full - Connect the drain hose and drain the collected water away. If error repeats, call for service

⑤ Power management feature(for power management models)





When the ambient temperature is lower (Cooling mode) or higher (Heating mode) than the setting temperature for a period of time, the unit will be automatically operate power management feature.

The compressor and fan motor stop and the power management indicator light illuminates. When the ambient temperature is higher (Cooling mode) or lower (Heating mode) than the setting temperature, the unit will be automatically quit the power management feature. The power management indicator light turns dark and the compressor and (or) fan motor run.

NOTE: When more than one codes occur, the priority of the code display order is:

E0—EC—E4—E2—E1—P1

■ 4. Dimension

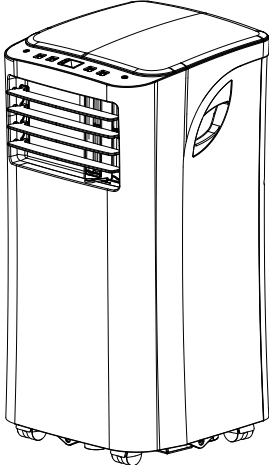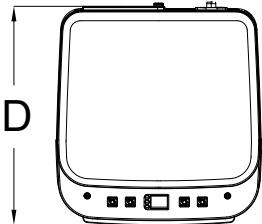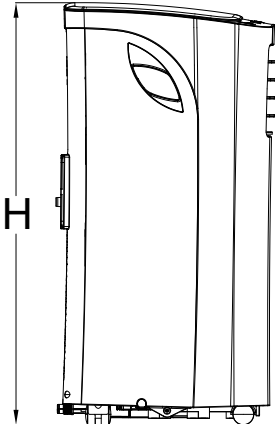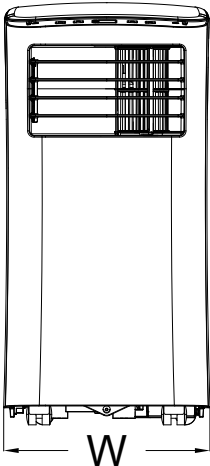


Capacity(Btu/h)	W(mm)	H(mm)	D(mm)
small body	329	318	615
big body	345	355	703

■ 5. Refrigerant Cycle Diagram


The figure below is a brief description of the important components and their function in what is called the refrigeration system.


This will help to understand the refrigeration cycle and the flow of the refrigerant in the cooling cycle.

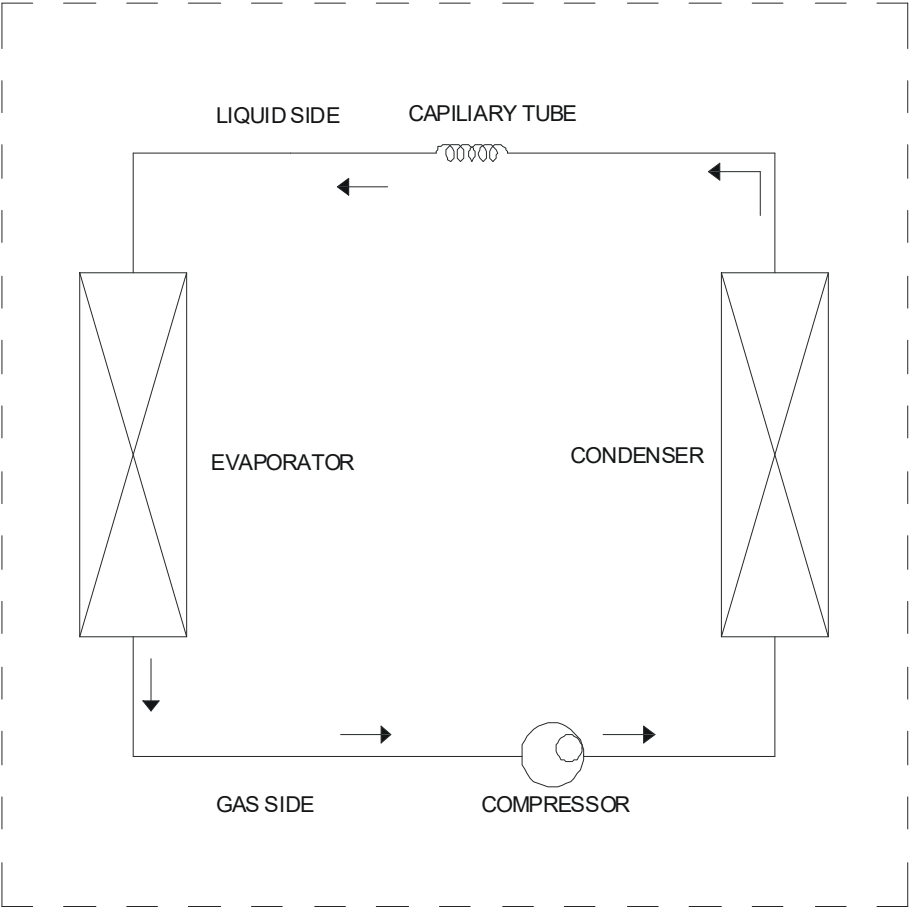

■ 6. Wiring Diagram

MPPHA-05CRN7-QB6, MPPH-07CRN7-QB6G1, MPPH-08CRN7-QB6, MPPH-09CRN7-QB6

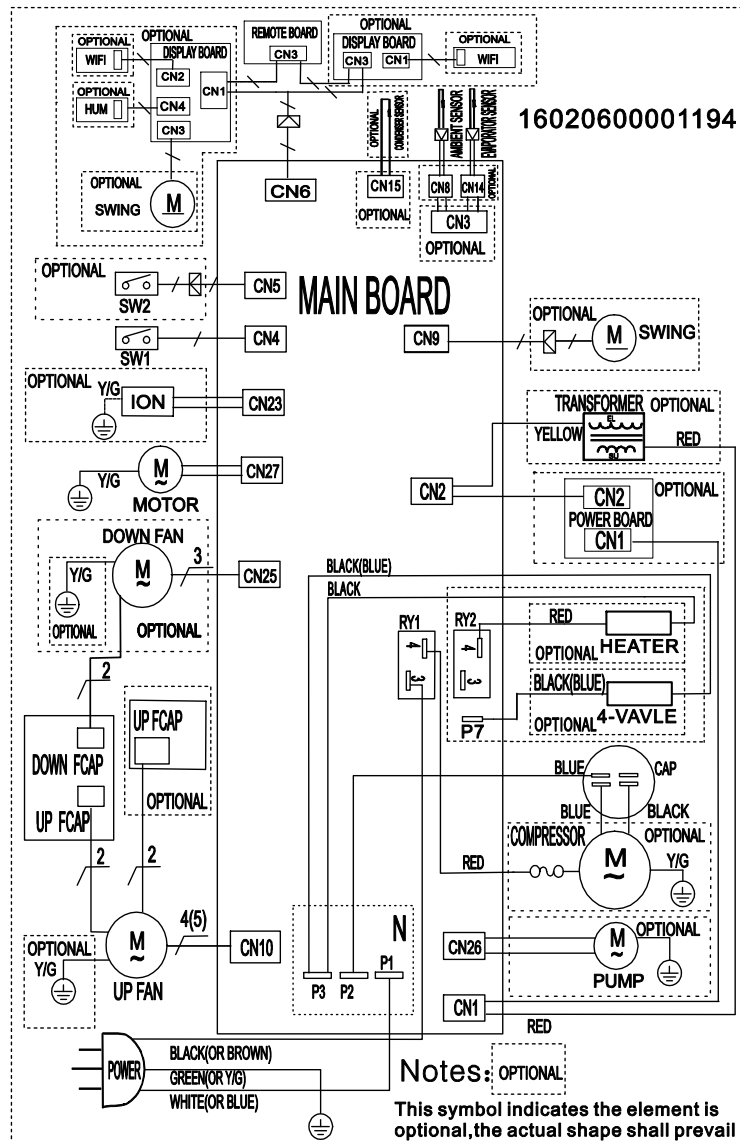

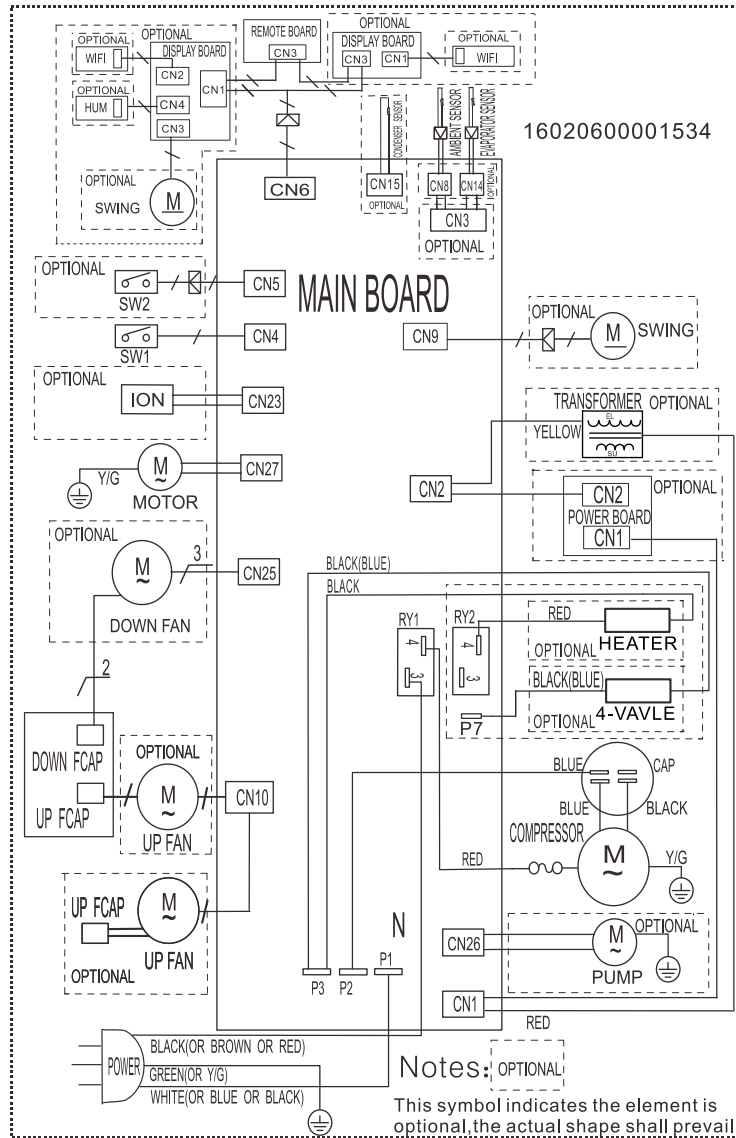

■ 7 Electronic function

■ 7.1 Terms and definitions

TC: Temperature of evaporator (T2).

TA: Temperature of indoor ambient (T1).

TS: The set temperature.

TE: Temperature of condenser (T3)

■ 7.2 Electric Control working environment

Input voltage: 187~264V for 50Hz models and 97~127V for 60Hz models;

■ 7.3 Protection function

7.3.1 The compressor functions protection with a delay of three minutes.

7.3.2 Sensor protection at open or short circuit.

7.3.3 Evaporator anti-frozen protection in cooling mode.

■ 7.4 Fan-only mode function requirement


7.4.1. The compressor is off at fan-only mode.

7.4.2. Auto fan: In fan-only mode, AC operates the same as auto fan in cooling mode with the temperature set at 24°C.

■ 7.5 Cooling mode function requirement

7.5.1. The speed of fan can be optionally selected as High/Medium/Low.


7.5.2. The compressor operates as below.

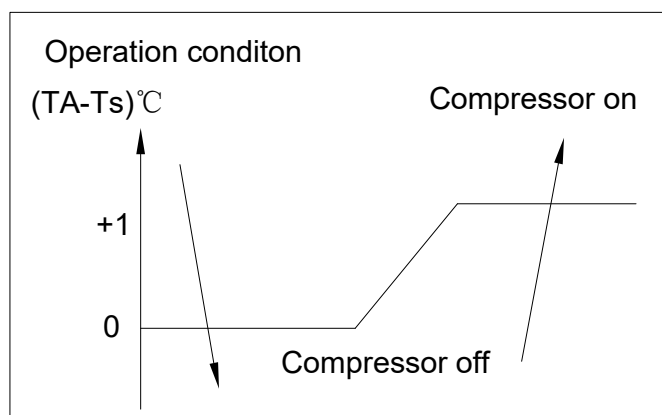

7.5.2.1 If $TA > TS + 1^{\circ}\text{C}$, the two fans operate. After 15 seconds, the compressor operates.

7.5.2.2 If $TA \leq TS$ after the compressor operates, this compressor will stop, and two fans last for working all the time.


7.5.3 Auto fan acts as below rules:

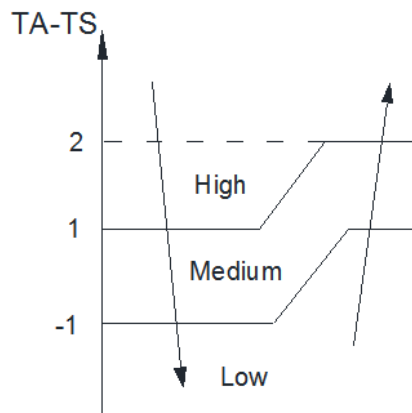

7.5.5. The TIMER function is valid in the cooling mode.

■ 7.6 Drying mode

7.6.1. When the unit starts to operate at drying mode, the compressor will start while the room temperature is over 13°C . After the compressor started, the compressor will operate as below.

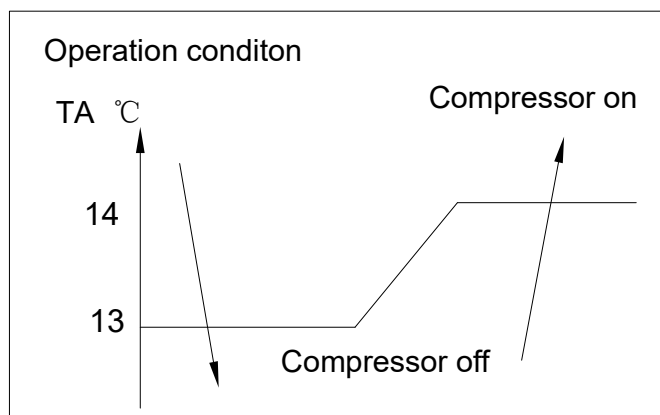

7.6.1.1 When $TA < 13^{\circ}\text{C}$, the compressor stops. And the fan operates at low speed at all time.

7.6.1.2 When $TA \geq 14^{\circ}\text{C}$, the compressor operates.

7.6.2. The fan operates with compressor.

■ 7.7 Some standard functions synopsis

7.7.1. Timer function

When the unit is on, firstly press the Timer button, the TIMER OFF indicator light illuminates. It indicates the Auto Stop program is initiated. When the unit is off, firstly press the Timer button, the TIMER ON indicator light illuminates. It indicates the Auto Start program is initiated. Press or hold the UP or DOWN button to change the Auto time by 0.5 hour increments, up to 10 hours, then at 1 hour increments up to 24 hours. The control will count down the time remaining until start. The selected time will register in 5 second and the system will automatically revert back to display the previous temperature setting. Turning the unit ON or OFF at any time or adjusting the timer setting to 0.0 will cancel the Auto Start/Stop timed program. When the malfunction (E1 or E2) occurs, the Auto Start/Stop timed program will also be cancelled.

7.7.2. Sleep function

Press this button, the selected temperature will increase (cooling) or decrease (heating) by 1°C/2°F 30 minutes. The temperature will then increase (cooling) or decrease (heating) by another 1°C/2°F after an additional 30 minutes. This new temperature will be maintained for 7 hours before it returns to the originally selected temperature. This ends the sleep mode and the unit will continue to operate as originally programmed.


■ 8 Installation details

■ 8.1 Installation instructions

Location

Your installation location should meet the following requirements:

- Make sure that you install your unit on an even surface to minimize noise and vibration.
- The unit must be installed near a grounded plug, and the Collection Tray Drain (found on the back of the unit) must be accessible.
- The unit should be located at least 30cm (12") from the nearest wall to ensure proper air conditioning. The horizontal louver blade should be at least 50cm (19.7") away from obstacles.
- DO NOT cover the Intakes, Outlets or Remote Signal Receptor of the unit, as this could cause damage to the unit.




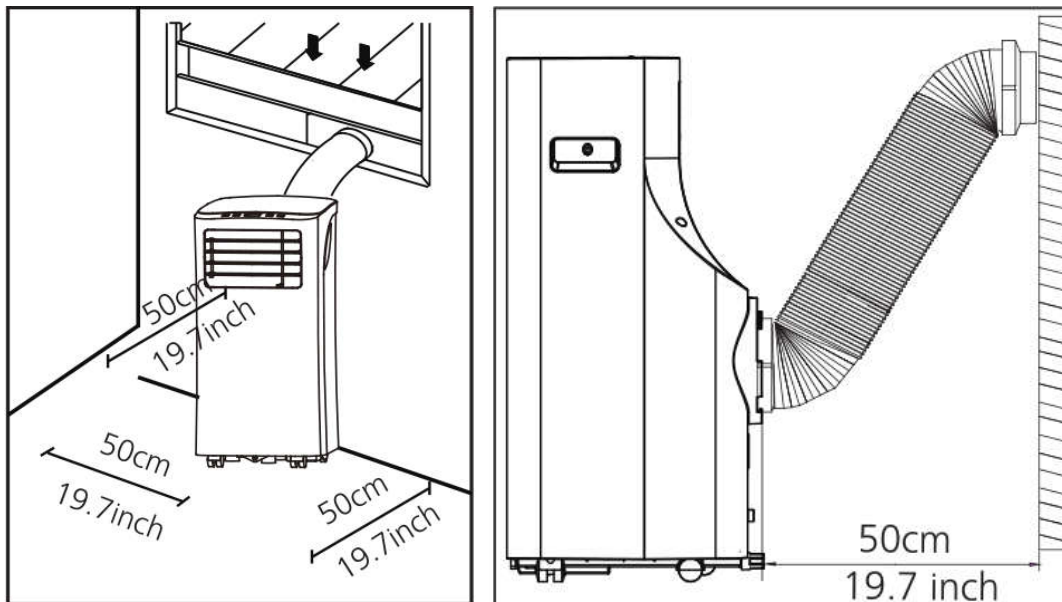


Window slider kit Installation



Step1:Preparing the Exhaust Hose assembly

Press the exhaust hose (or extended exhaust hose) into the window slider adaptor(or wall exhaust adaptor) and unit adaptor, clamp automatically by elastic buckles of the adaptors.

Type window installation:

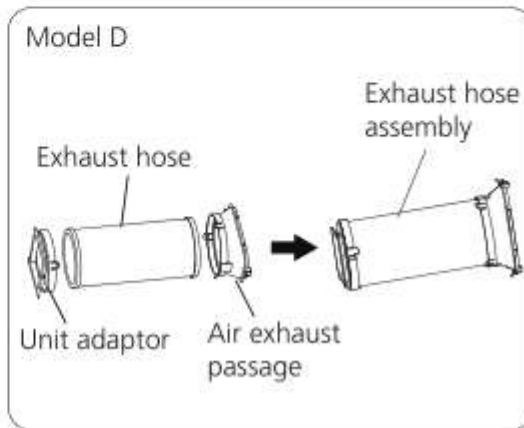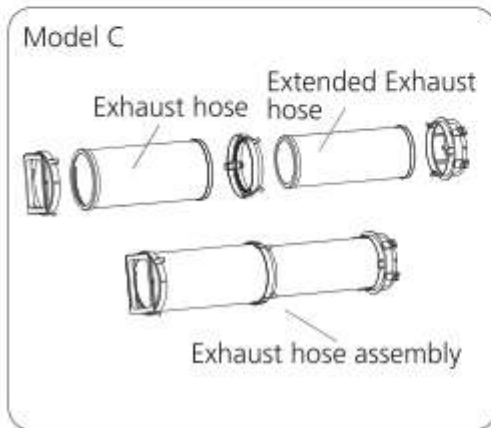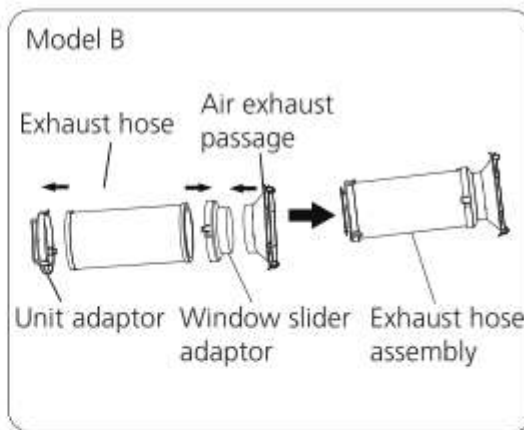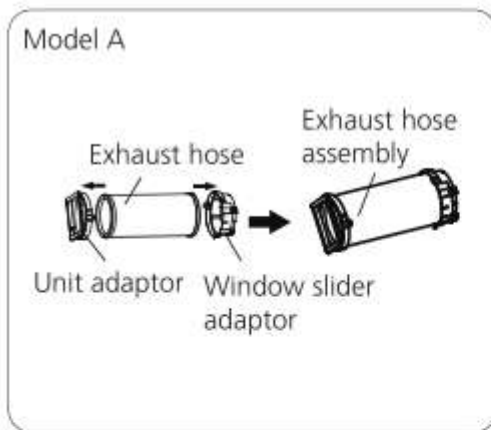


Type wall installation:

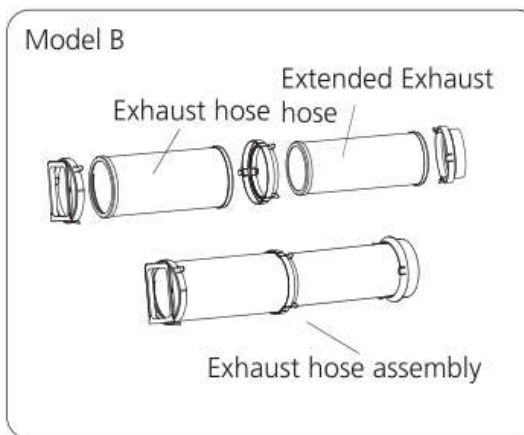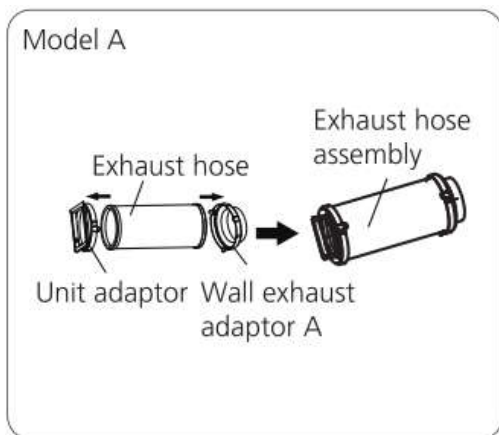

Step 2: Install the Exhaust hose assembly to the unit

Push the Exhaust hose into the airoutlet opening of the unit along the arrow direction.

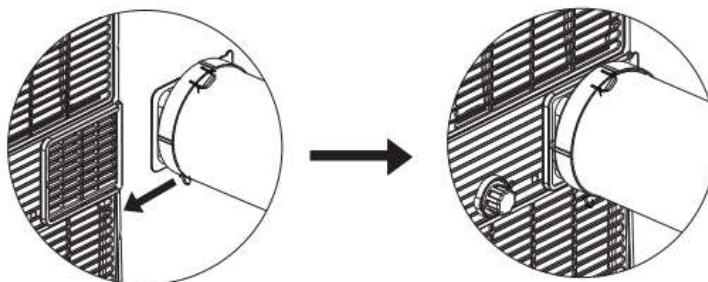


Step 3: Preparing the Adjustable Window Slider


1. Choose the window sliders according the size of your window. Sometimes, it needs to be cut short to meet the window size, please take extra care to cut it properly.

2. Use bolts to fasten the window sliders once they are adjusted to the Proper length.

MODEL A

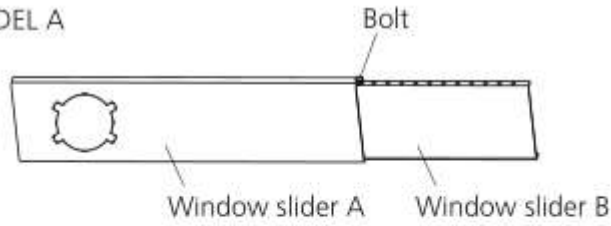


or

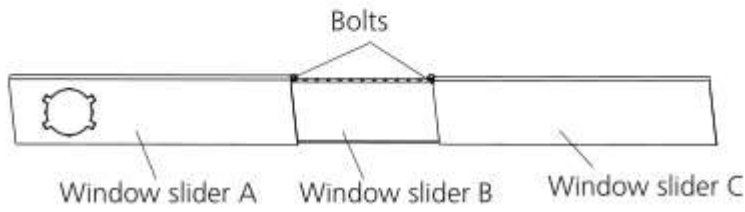



MODEL B

Before assembly

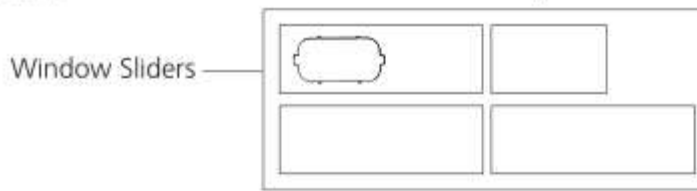

After assembly

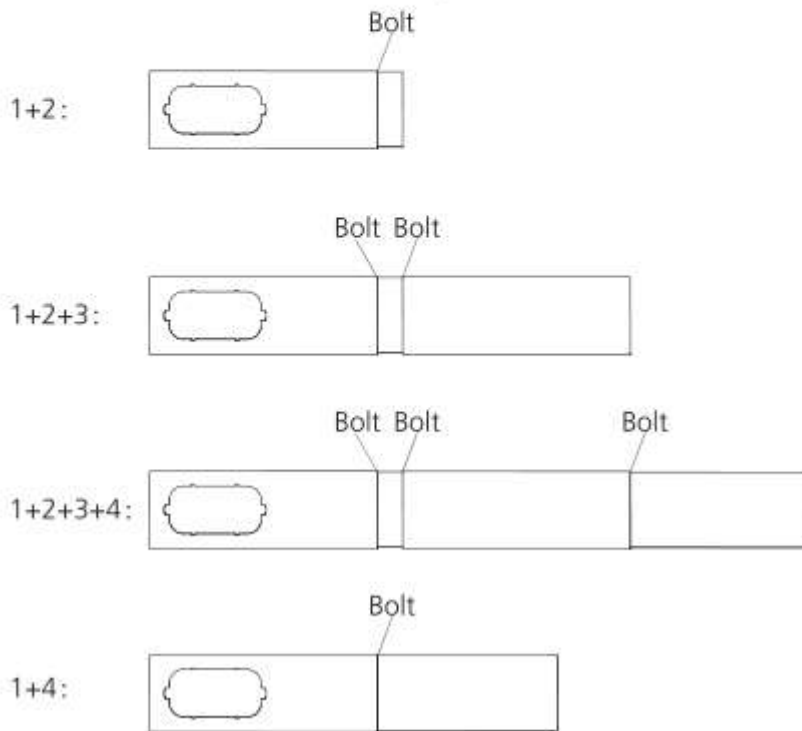


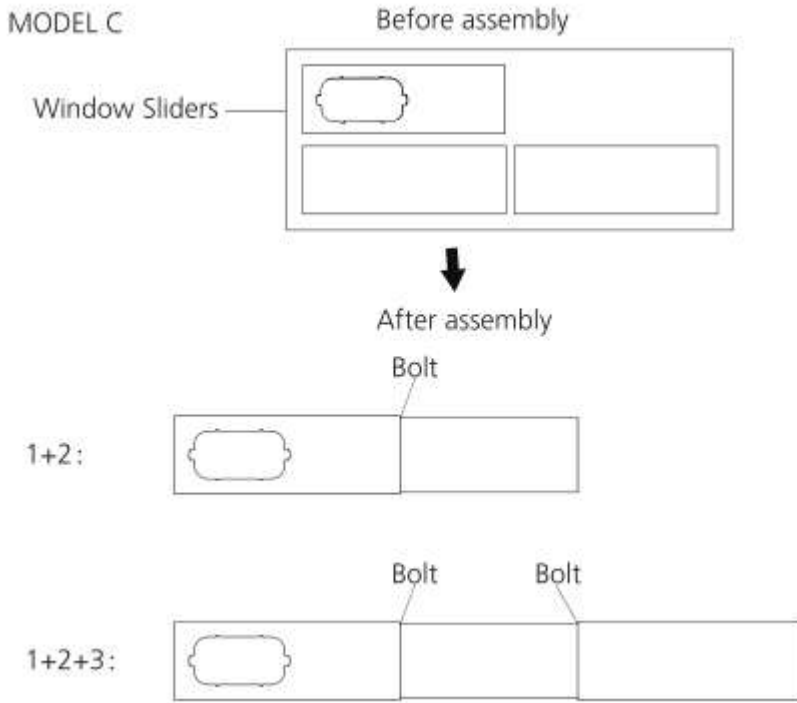


Exhaust Hose Installation

Note: Once the Exhaust Hose assembly and Adjustable Window Slider are prepared, choose from one of the following two installation methods.


Type 1: Hung Window Installation or Sliding Window Installation(For some models)

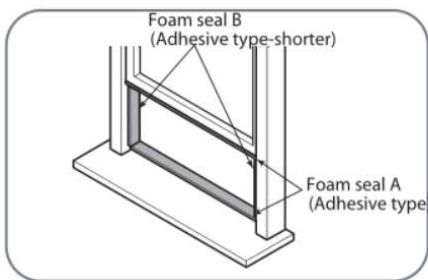


Or

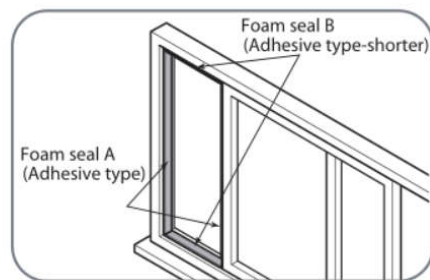


1. Cut the adhesive foam seal A and B strips to the proper lengths, and attach them to the window sash and frame as shown.

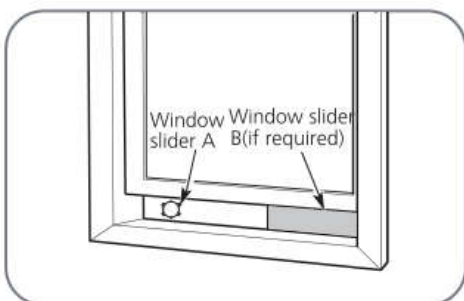


Or

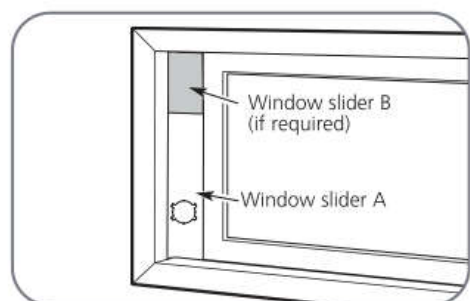


2. Insert the window slider assembly into the window opening.

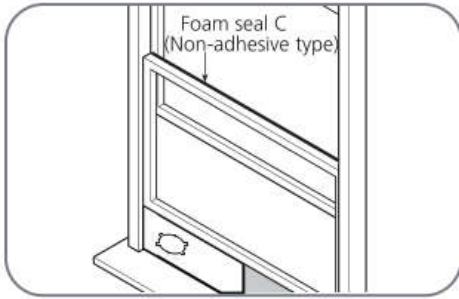


Or

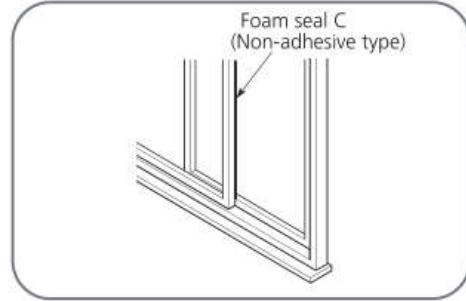


3. Cut the non-adhesive foam seal C strip to match the width (or height) of the window. Insert the seal between the glass and the window frame to prevent air and insects from getting into the room

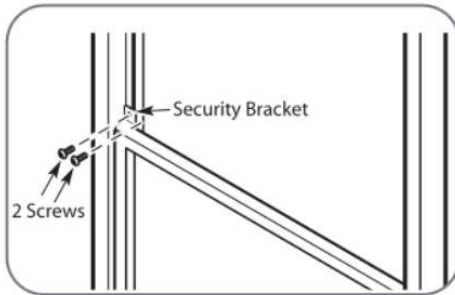


Or

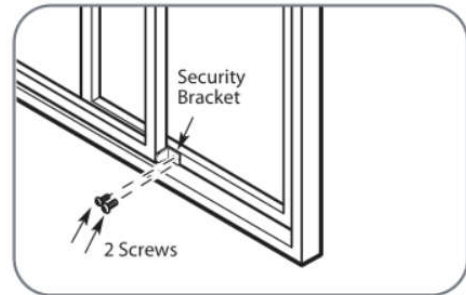

4. If desired, install the security bracket with 2 screws as shown.

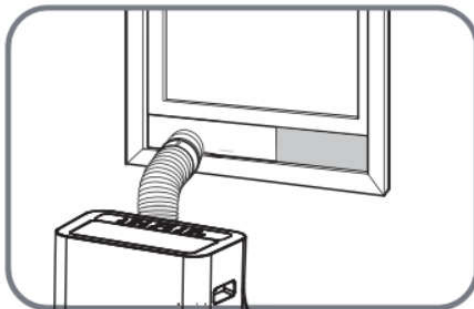


Or

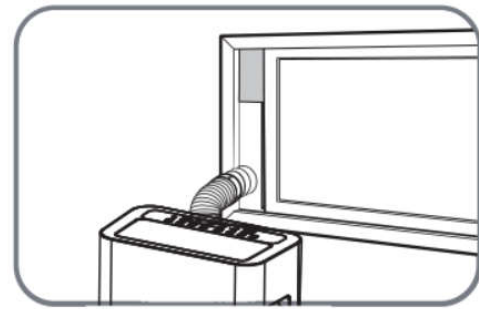

5. Insert the window slider adaptor into the hole of the window slider.


Type 2: Wall Installation (Optional)

1. Cut a 125mm (4.9inch) hole into the wall for the Wall Exhaust Adaptor B.
2. Secure the Wall Exhaust Adaptor B to the wall using the four Anchors and Screws provided in the kit.
3. Connect the Exhaust Hose Assembly (with Wall Exhaust Adaptor A) to the Wall Exhaust Adaptor B.

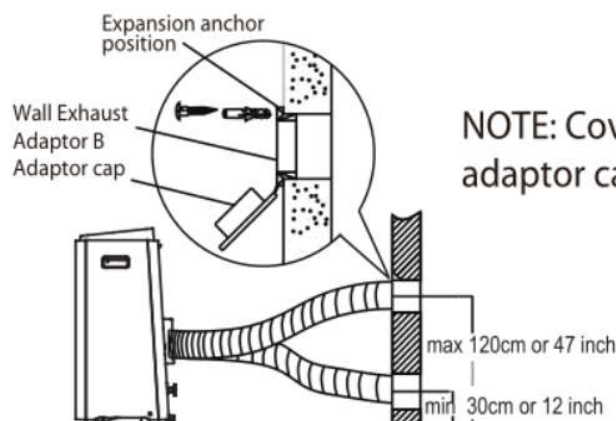


NOTE: Cover the hole using the adaptor cap when not in use.

NOTE: To ensure proper function, DO NOT overextend or bend the hose. Make sure that there is no obstacle around the air outlet of the exhaust hose (in the range of 500mm) in order to the exhaust system works properly. All the illustrations in this manual are for explanation purpose only. Your air conditioner may be slightly different. The actual shape shall prevail.

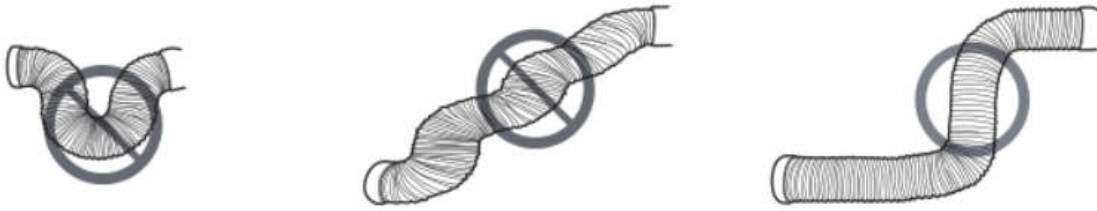

Water drainage installation

1. During dehumidifying mode, remove the drain plug from the back of the unit, install the drain connector (5/8" universal female mender) with 3/4" hose (locally purchased). For the models without drain connector, just attach the drain hose to the hole. Place the open end of the hose directly over the drain area in your basement floor.

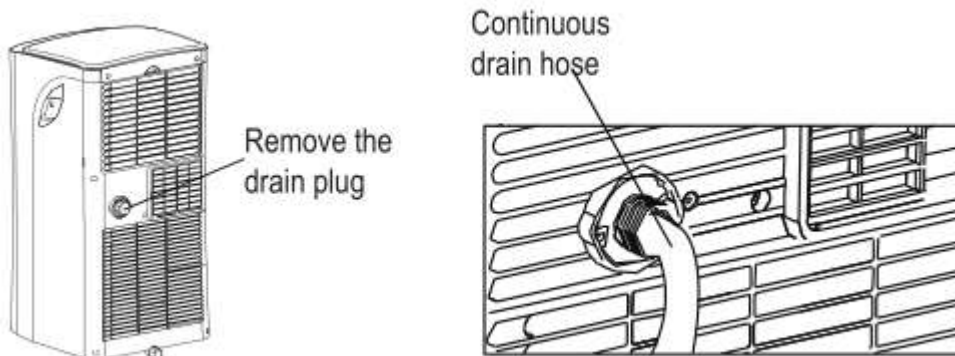

NOTE: Make sure the hose is secure so there are no leaks. Direct the hose toward the drain, making sure that there are no kinks that will stop the water flowing. Place the end of the hose into the drain and make sure the end of the hose is down to let the water flow smoothly. When the continuous drain hose is not used, ensure that the drain plug and knob are installed firmly to prevent leakage.

■ 8.2 Care and maintenance

Important

- 1) Be sure to unplug the unit before cleaning or servicing.
- 2) Do not use gasoline, thinner or other chemicals to clean the unit.

- 3) Do not wash the unit directly under a tap or using a hose. It may cause electrical danger.
- 4) If the power cord is damaged, it should be repaired by manufacture or its agency.

1. Air filter


Clean the air filter at least once every two weeks to prevent inferior fan operation because of dust

Removal

Grasp the air filter tab, pull the filter “out” then “up”.

Clean the Air Filter



 **CAUTION**
DO NOT operate the unit without filter because dirt and lint will clog it and reduce performance.

Cleaning

Wash the air filter by immersing it gently in warm water (about 40°C/104°F) with a neutral detergent.

Rinse the filter and dry it in a shady place.

2. Unit enclosure

Clean the unit using a damp, lint-free cloth and mild detergent. Dry the unit with a dry, lint-free cloth.

3. Unit idle for a long time

- ※ Drain the unit’s water collection tray according to the instructions in the following section..
- ※ Run the appliance on FAN mode for 12 hours in a warm room to dry it and prevent mold.
- ※ Turn off the appliance and unplug it.
- ※ Clean the air filter according to the instructions in the previous section. Reinstall the clean, dry filter before storing.
- ※ Remove the batteries from the remote control.

Note: Be sure to store the unit in a cool, dark place. Exposure to direct sunshine or extreme heat can shorten the lifespan of the unit.


■ 9 Basic test procedure

■ 9.1 Defective compressor

Compressors are single phase, depending on the model unit. All compressor motors are permanent split capacitor type using only a running capacitor across the start and run terminal.

All compressors are internally spring mounted and externally mounted on rubber isolators.

9.1.1 Compressor wiring test

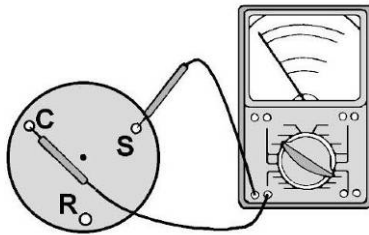


Remove compressor terminal box cover and disconnect wires from terminals. Using an ohmmeter, check continuity across the following:

- Terminal "C" and "S" - no continuity
- Open winding - replace compressor.
- Terminal "C" and "R" - no continuity
- Open winding - replace compressor.
- Terminal "R" and "S" - no continuity
- Open winding - replace compressor.

9.1.2 Ground test

Use an ohmmeter to set on its highest scale. Touch one lead to the compressor body (clean point of contact as a good connection is a must) and the other probe in turn to each compressor terminal (see Figure 2.) If a reading is obtained, the compressor is grounded and must be replaced.

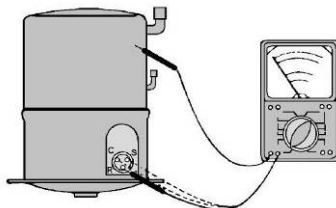

9.1.3 Checking the compressor efficiency

The reason for compressor inefficiency is normally due to broken or damaged suction and/or discharge valves, reducing the ability of the compressor to pump refrigerant gas.

This condition can be checked as follows:

1. Install a piercing valve on the suction and discharge or liquid process tube.
2. Attach gauges to the high and low sides of the system.
3. Start the system and run a "cooling or heating performance test."

If test shows:

- A. Below normal high side pressure.
- B. Above normal low side pressure.
- C. Low temperature difference across coil.

The compressor valves are faulty - replace the compressor

9.1.4 Terminal overload (external)

Some compressors are equipped with an external overload which is located in the compressor terminal box adjacent to the compressor body. The overload is wired in series with the common motor terminal. The overload senses both major amperage and compressor temperature. High motor temperature or amperage heats the disc causing it to open and break the circuit to the common motor terminal.

Heat generated within the compressor shell is usually due to:

1. High amperage.
2. Low refrigerant charge.
3. Frequent recycling.
4. Dirty condenser.

9.1.5 Terminal overload – Test (compressor external type)

1. Remove overload.
2. Allow time for overload to reset before attempting to test.
3. Apply ohmmeter probes to terminals on overload wires. There should be continuity through the overload.

9.1.6 Terminal overload (internal)

Some model compressors are equipped with an internal overload. The overload is embedded in

the motor windings to sense the winding temperature and/or current draw. The overload is connected in series with the common motor terminal.

Should the internal temperature and/or current draw become excessive; the contacts in the overload will open, turning off the compressor? The overload will automatically reset, but may require several hours before the heat is dissipated.

9.1.7 Checking the internal overload

1. No power to unit, remove the leads from the compressor terminals.
2. Using an ohmmeter, test continuity between terminals C-S and C-R. If not continuous, the compressor overload is open and the compressor must be replaced.

■ 9.2 Sealed refrigeration system repairs

9.2.1 Equipment require

1. Voltmeter
2. Ammeter
3. Ohmmeter
4. E.P.A. Approved Refrigerant Recovery System.
5. Vacuum Pump (capable of 200 microns or less vacuum.)
6. Acetylene Welder
7. Electronic Halogen Leak Detector (G.E. Type H-6 or equivalent.)
8. Accurate refrigerant charge measuring device such as:
 - a. Balance Scales - 1/2 oz. accuracy
 - b. Charging Board - 1/2 oz. accuracy
9. High Pressure Gauge - (0 - 400 lbs.)
10. Low Pressure Gauge - (30 - 150 lbs.)
11. Vacuum Gauge - (0 - 1000 microns)

9.2.2 Equipment must be capable of:

1. Recovery CFC's as low as 5%.
2. Evacuation from both the high side and low side of the system simultaneously.
3. Introducing refrigerant charge into high side of the system.
4. Accurately weighing the refrigerant charge actually introduced into the system.
5. Facilities for flowing nitrogen through refrigeration tubing during all brazing processes.

9.2.3 Hermetic compressor replacement.

The following procedure applies when replacing components in the sealed refrigeration circuit or repairing refrigerant leaks. (Include Compressor, condenser, evaporator, capillary tube, refrigerant leaks, etc.)

1. Recover the refrigerant from the system at the process tube located on the high side of the system by installing a line tap on the process tube. Apply gauge from process tube to EPA approved gauges from process tube to EPA approved recovery system. Recover CFCs in system to at least 5%.
2. Cut the process tube below pinch off on the suction side of the compressor.
3. Connect the line from the nitrogen tank to the suction process tube.
4. Drift dry nitrogen through the system and unsolder the more distant connection first. (Filter drier, high side process tube, etc.)
5. Replace inoperative component, and always install a new filter drier. Drift dry nitrogen through the system when making these connections.
6. Pressurize system to 30 PSIG with proper refrigerant and boost refrigerant pressure to 150 PSIG with dry nitrogen.
7. Leak test complete system with electric halogen leak detector, correcting any leaks found.
8. Reduce the system to zero gauge pressure.
9. Connect vacuum pump to high side and low side of system with deep vacuum hoses, or copper tubing. (Do not use regular hoses.)
10. Evacuate system to maximum absolute holding pressure of 200 microns or less. NOTE: This process can be speeded up by use of heat lamps, or by breaking the vacuum with refrigerant or dry nitrogen at 5,000 microns. Pressure system to 5 PSIG and leave in system a minimum of 10 minutes. Recover refrigerant, and proceed with evacuation of a pressure of 200 microns or a minimum of 10%.
11. Break vacuum by charging system from the high side with the correct amount of refrigerant specified. This will prevent boiling the oil out of the crankcase.

NOTE: If the entire charge will not enter the high side, allow the remainder to enter the low side in small increments while operating the unit.
12. Restart unit several times after allowing pressures to stabilize. Pinch off process tubes, cut and solder the ends. Remove pinch off tool, and leak check the process tube ends

9.2.4 Special procedure in the case of compressor motor burnout

1. Recover all refrigerant and oil from the system.

2. Remove compressor, capillary tube and filter drier from the system.
3. Flush evaporator condenser and all connecting tubing with dry nitrogen or equivalent, to remove all contamination from system. Inspect suction and discharge line for carbon deposits. Remove and clean if necessary.
4. Reassemble the system, including new drier strainer and capillary tube.
5. Proceed with processing as outlined under hermetic component replacement.

9.2.5 Rotary compressor special troubleshooting and service

Basically, troubleshooting and servicing rotary compressors is the same as on the reciprocating compressor with only a few exceptions.

1. Because of the spinning motion of the rotary, the mounts are critical. If vibration is present, check the mounts carefully.
2. The electrical terminals on the rotary are in a different order than the reciprocating compressors. The terminal markings are on the cover gasket. Use your wiring diagram to insure correct connections.

9.2.6 Refrigerant charge

1. The refrigerant charge is extremely critical. It must be measured charge carefully - as exact as possible to the nameplate charge.
2. The correct method for charging the rotary is to introduce liquid refrigerant into the high side of the system with the unit off. Then start compressor and enter the balance of the charge, gas only, into the low side.

The introduction of liquid into the low side, without the use of a capillary tube, will cause damage to the discharge valve of the rotary compressor.

NOTE: All inoperative compressors returned to Friedrich must have all lines properly plugged with the plugs from the replacement compressor.

■ 9.3 Fan motor

A single phase permanent split capacitor motor is used to drive the evaporator blower and condenser fan. A self-resetting overload is located inside the motor to protect against high temperature and high amperage conditions.

9.3.1 Fan motor test


1. Determine that capacitor is serviceable.

2. Disconnect fan motor wires from fan speed switch or system switch.
3. Apply "live" test cord probes on black wire and common terminal of capacitor. Motor should run at high speed.
4. Apply "live" test cord probes on red wire and common terminal of capacitor. Motor should run at low speed.
5. Apply "live" test cord probes on each of the remaining wires from the speed switch or system switch to test intermediate speeds.

■ 9.4 Capacitor

A run capacitor is wired across the auxiliary and main winding of a single phase permanent split capacitor motor such as the compressor and fan motor. A single capacitor can be used for each motor or a dual rated capacitor can be used for both.

The capacitor's primary function is to reduce the line current while greatly improving the torque characteristics of a motor. The capacitor also reduces the line current to the motor by improving the power factor of the line side of the load. Run capacitor hook-up capacitor is marked with a red dot and is wired to

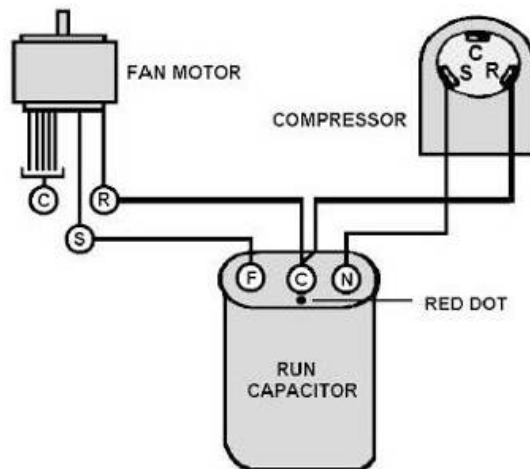

load. Run capacitor hook-up capacitor is marked with a red dot and is wired to the line side of the circuit.

Capacitor test:

1. Remove capacitor from unit.
2. Check for visual damage such as bulges, cracks, or leaks
3. For dual rated, apply an ohmmeter lead to common (C) terminal and the other probe to the compressor (HERM) terminal. A satisfactory capacitor will cause a deflection on the pointer, and

then gradually move back to infinity.

4. Reverse the leads of the probe and momentarily touch the capacitor terminals. The deflection of the pointer should be two times that of the first check if the capacitor is good.

5. Repeat steps 3 and 4 to check fan motor capacitor.

NOTE: A shorted capacitor will indicate a low resistance and the pointer will move to the "0" end of the scale and remain there as long as the probes are connected.

An open capacitor will show no movement of the pointer when placed across the terminals of the capacitor.

■ 10 Characteristic of temperature sensor

Temp. °C	Resistance KΩ	Temp. °C	Resistance KΩ	Temp. °C	Resistance KΩ
-10	62.2756	17	14.6181	44	4.3874
-9	58.7079	18	13.918	45	4.2126
-8	56.3694	19	13.2631	46	4.0459
-7	52.2438	20	12.6431	47	3.8867
-6	49.3161	21	12.0561	48	3.7348
-5	46.5725	22	11.5	49	3.5896
-4	44	23	10.9731	50	3.451
-3	41.5878	24	10.4736	51	3.3185
-2	39.8239	25	10	52	3.1918
-1	37.1988	26	9.5507	53	3.0707
0	35.2024	27	9.1245	54	2.959
1	33.3269	28	8.7198	55	2.8442
2	31.5635	29	8.3357	56	2.7382
3	29.9058	30	7.9708	57	2.6368
4	28.3459	31	7.6241	58	2.5397
5	26.8778	32	7.2946	59	2.4468
6	25.4954	33	6.9814	60	2.3577
7	24.1932	34	6.6835	61	2.2725
8	22.5662	35	6.4002	62	2.1907
9	21.8094	36	6.1306	63	2.1124
10	20.7184	37	5.8736	64	2.0373
11	19.6891	38	5.6296	65	1.9653
12	18.7177	39	5.3969	66	1.8963
13	17.8005	40	5.1752	67	1.83
14	16.9341	41	4.9639	68	1.7665
15	16.1156	42	4.7625	69	1.7055
16	15.3418	43	4.5705	70	1.6469

■ 11 Troubleshooting

In general, possible trouble is classified in three kinds. One is called Starting Failure which is caused from an electrical defect, another is ineffective Air Conditioning caused by a defect in the refrigeration circuit and improper application, and the other is called the Structure Damage.

TROUBLES	POSSIBLE CAUSES	SUGGEST REMEDIES
1. Unit does not Start when Pressing on/off Button	P1 Error Code	Drain the water in the bottom tray.
	In COOL mode: room temperature is lower than the set temperature	Reset the temperature.
2. Unit does not cool well	The air filter is blocked with dust or animal hair	Turn of the unit and clean the filter according to instructions
	Exhaust hose is not connected or is blocked	Turn of the unit, disconnect the hose, check for blockage and reconnect the hose
	The unit is low on refrigerant	Call a service technician to inspect the unit and top of refrigerant
	Temperature setting is too high	Decrease the set temperature
	The windows and doors in the room are open	Make sure all windows and doors are closed
	The room area is too large	Double-check the cooling area
	There are heat sources inside the room	Remove the heat sources if possible
3. The unit is noisy and vibrates too much	The ground is not level or not flat enough.	Place the unit on a flat, level surface
	The air filter is blocked with dust or animal hair	Turn of the unit and clean the filter according to instructions
4. The unit makes a gurgling sound	This sound is caused by the flow of refrigerant inside the unit	It is normal.

■ Error codes and Solution

E1---Room temperature sensor error.

E2---Evaporator temperature sensor error.

Causation:

- a) Port of temperature sensor is loose.
- b) Temperature sensor is bad.
- c) Circuit component is bad.

Solution:

- a) Check the connection between temperature sensor and adaptor is ok, if not, please make sure the port plugs into the adaptor hard.
- b) Restart the unit. If it can not resume. Please use another good temperature sensor instead.
- c) Restart the unit. If it also can not resume. Please replace the PCB.

E4--- Communication malfunction between
main control board and display board

Causation:

The display board does not receive feedback from the driver board for 120 seconds.

- a) Wire port is loose.
- b) Circuit component of display panel is bad.
- c) Circuit component of PCB is bad.

Solution:

- a) Check the wire between display panel and PCB, make sure the connection is ok.
- b) Restart the unit. If it can not resume after 2 minutes, please replace the display panel.
- c) Restart the unit. If it can not resume after 2 minutes, please replace the PCB.

E0---Display board EEPROM parameter error

Causation: Main chip does not receive feedback from EEPROM chip.

Solution:

a) Power off, then restart. If it can not resume after 2 minutes, please replace the display PCB.

EC--- Refrigerant Leakage Detection

Causation: Define the evaporator coil temp. T2 of the compressor just starts running as Tcool.

In the beginning 5 minutes after the compressor starts up, if $T2 < T_{cool} - 1^{\circ}\text{C}$ does not keep continuous 4 seconds and this situation happens 3 times, the display area will show "EC" and AC will turn off.

Solution:

- a) Check the connection between T2 temperature sensor and adaptor is ok, if not, please make sure the port plugs into the adaptor hard.
- b) Restart the unit. If it can not resume. Please use another good T2 temperature sensor instead.
- c) Is there cool air blowing out from indoor air outlet? If yes, Please replace the PCB.
- d) Is there any leakage? If yes, Repair the leakage and recharge the refrigerant.
- e) Is there any blocking? If yes, Clear the blocking.

P1---Water full protection.

Causation: Water in tank is full.

Solution: Connect the drain hose and drain the collected water away.