

BEHA CLASSIC PANELOVN  
HC 5, HC 10, HC 15, HC 20

INSTALLATION AND USER GUIDE

**BEHA**

HC 5



HC 10



HC 15



HC 20



**LANGUAGES:**

---

NO	3
UK	9

## INNHold

1.0 Teknisk informasjon	3
2.0 Sikkerhets informasjon	4
3.0 Installasjon	5
4.0 Bruk av ovnen	5
5.0 Stell og vedlikehold	7
6.0 Samsvar / Årsvirkningsgrad	7
7.0 Avfallshåndtering	8

Les bruksanvisningen nøye før bruk, og ta vare på den for senere bruk. Bruksanvisningen ligger også på beha.no.

## 1.0 Teknisk informasjon

Fabrikkinnstilt temperatur er 22 grader. Termostaten kan justeres ned til 1 grader i ECO program. Maks temperatur er 35 °C. Ovnens er IP24 godkjent, og kan installeres på bad og vaskerom etter gjeldene forskrifter. Panelovnen har uketimer som kan brukes for å spare strøm.

### 1.1 Ved strømbrudd

Ovnen går tilbake til den satte komfort temperatur. For andre innstillinger se kapittel 4.8.

### 1.2 Åpen vindu-funksjon

Er åpent vindu funksjonen aktivert og temperaturen synker flere grader, i løpet av noen minutter, vil ovnen stoppe å varme. Etter 1 time går den tilbake til det valgte programmet den hadde før åpent vindu ble aktivert. Funksjonen kan også deaktiveres ved å trykke på åpent vindu knappen.

## 2.0 Sikkerhetsinformasjon

Når du bruker elektriske apparater, bør grunnleggende forhåndsregler alltid følges for å redusere risikoen for brann og personskader.

### Les hele bruksanvisningen før ovnen tas i bruk.

1. Før bruk fjernes all emballasje.
2. Slå av bryteren og fjern støpslet fra stikkontakten når ovnen ikke er i bruk og ved rengjøring.

### Denne ovnen er for rom oppvarming.

**ADVARSEL! Ovnens blir varm under bruk. Ikke berør varme overflater. Vær ekstra oppmerksom ved tilstedeværelse av personer med reduserte fysiske, sensoriske eller mentale evner, personer med manglende erfaring og kunnskap, eller barn.**

Barn fra 3 til 8 år, skal bare slå av/på apparatet, forutsatt at den har blitt plassert eller installert i sin tiltenkte vanlige stilling, og de har fått tilsyn eller instruksjoner om bruk av apparatet på en sikker måte og forstår farene som er involvert. Barn fra 3 til 8 år skal ikke koble til, regulere og rengjøre apparatet eller utføre brukervedlikehold.



**Advarsel! For å unngå overoppheting må ovnen ikke tildekkes**

Ovnen kan brukes av barn fra 8 år og oppover, personer med reduserte fysiske, sensoriske eller mentale evner, personer med manglende erfaring og kunnskap hvis de får tilsyn eller instruksjoner for bruk av ovnen. Instruksjonen må gis på en sikker måte, slik at farene involvert er forstått. Barn skal ikke leke med ovnen. Rengjøring og vedlikehold skal ikke gjøres av barn uten tilsyn.

Barn under 3 år skal holdes unna ovnen.

Ovnen må ikke brukes på plasser der det er støv, damp, gass, bensin, maling eller hvor

andre brannfarlige varer er lagret (eks. garasje). Må ikke brukes i eksplosjonsfarlige områder etc.

**Advarsel!** Bruk ikke ovnen i små rom hvor det er personer som ikke kan forlate rommet på egenhånd, med mindre de har konstant tilsyn.

Stikkontakten ovnen er tilkoblet skal være synlig og tilgjengelig.

Ovnen skal ikke plasseres rett under en stikkontakt. Er kabelen eller støpslet ødelagt skal ovnen ikke brukes. Kabelen må ikke komme i berøring med de varme overflatene på ovnen under bruk.

Kabelen skal ikke tildekkes av matter eller lignende. Kabelen skal ligge slik at den ikke blir tråkket på. Påse at ingen fremmede objekter er plassert i ventilasjonsgitteret da det kan forårsake elektrisk feil, brann eller ødelagt ovn.

Ved rengjøring, flytting eller når ovnen ikke er i bruk gjøres den strømløs ved først å slå den av med bryteren for så å trekke ut støpselet fra stikkontakten. Ikke dra i kabelen, men ta tak rundt støpselet.

Ikke ta på ovnen med våte hender.

Ovnen skal kun brukes i oppreist stilling.

Ovnen skal ikke repareres, demonteres eller modifiseres.

Er kabelen eller støpselet ødelagt må det byttes av service mann/kvinne eller tilsvarende kvalifisert person for å unngå fare.

 
Ikke bruk ovnen i umiddelbar nærhet av et badekar, dusj eller svømmebasseng. Fastmontert ovn skal installeres slik at bryter og kontrollpanelet ikke kan berøres av personer i badekar eller dusj.

Ikke bruk ovnen om den har synlige skader eller den har falt i gulvet.

**Advarsel!** Ovnen brukes unna hindringer som påvirkes av varme f.eks. møbler, gardiner, eller andre brennbare gjenstander.

**Advarsel:** Denne ovnen skal ikke styres fra en ekstern bryterenhet, for eksempel en timer, eller kobles til en krets som regelmessig slås på.

### 3.0 Installasjon

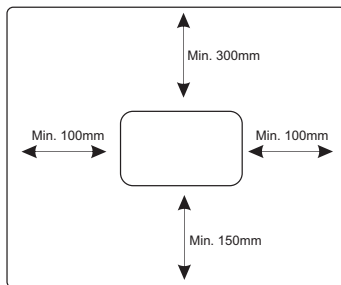


Ved montering brukes følgende avstander.

#### 3.1 Elektrisk tilkobling og bruk

 Før tilkobling påse at nettspenningen er 220-240V ~ 50-60 Hz. Ovnen tilkobles stikkontakt i det rommet den brukes i. Bruk ikke skjøteledning, da det kan medføre brannfare.

#### 3.2 Monter ovnen

- Fest veggfeste på veggen. Bruke vater slik at hullene er parallelle. Bruk en merkepen for å markere hullenes posisjon.
- Bor hull i veggen med 8mm bor og sett inn plastpluggene.
- Fest veggfeste på veggen med skruene.
- Monter ovnen nede på veggfeste og skyv deretter ovnen inn på festene oppe. Bruk en flat skrutrekker og lås fast veggfestet med plastdetaljene oppe på veggfeste.

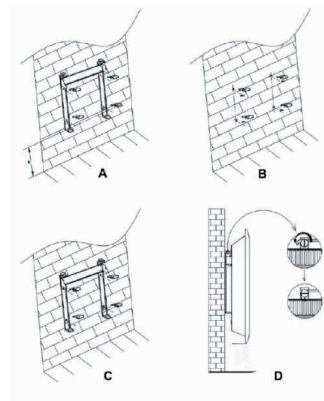

**Advarsel!** Avstanden fra underkant av ovnen til gulvet skal være minst 15cm

**Advarsel!** Husk å sjekke at det ikke er kabler eller annet skult i veggen der det borres.


**Advarsel!** Før det settes strøm på ovnen sjekk at den er ordentlig festet til veggfestet.

#### 3.3 Størrelser på ovnene

 Type	Watt	Høyde (mm)	Bredde (mm)	Dybde (mm)
Beha Classic HC 5	500	435	515	105
Beha Classic HC 10	1000	435	515	105
Beha Classic HC 15	1500	435	645	105
Beha Classic HC 20	2000	435	815	105

## 4.0 Bruk av ovnen


### 4.1 Kontroll panel

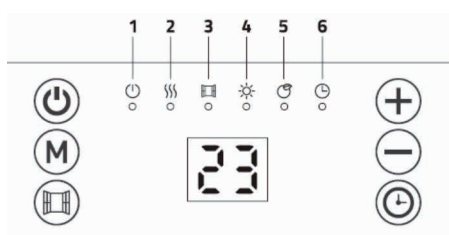

	Standby
	Program velger
	Åpent vindu funksjon
	Øke temperatur
	Redusere temperatur
	Timer

- ① Standby: Av / På
- ② Varme status
- ③ Åpent vindu funksjon
- ④ Komfort program
- ⑤ ECO program
- ⑥ Timer

#### 4.2 Hvordan bruke ovnen

Ovnen kobles til AC 230-240V 50-60Hz stikkontakt. Når bryteren aktiveres høres et beep. Indikatorlampen  vil lyse.




#### 4.3 Fabrikk innstillinger

- Varme funksjon = Komfort program
- Fabrikkinnstilt temperatur: 22 °C
- Dag: 1 (Mandag); Tid: 00:00 (Av)
- Åpent vindu funksjon: Av
- Timer: Av









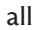
Avvik på fabrikkinnstillinger kan forekomme fordi ovnen har blitt kvalitetstestet etter produksjon.

For å slå av ovnen trykk på . Når ovnen ikke er i bruk fjernes støpselet fra stikkontakten.

#### 4.4 Innstilling av klokke og dager


Trykk på  i 3 sekunder. Displayet viser nå "d", Trykk  og  for å sette dag 1 til 7.

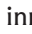
1. Mandag
2. Tirsdag
3. Onsdag
4. Torsdag
5. Fredag
6. Lørdag
7. Søndag


- Trykk  for å bekrefte dag og for å komme til klokkeinnstillinger hvor displayet viser: 
- Trykk  og  for å stille klokken.
- Trykk  for å bekrefte innstillingen og for å komme til minutt innstillingen, hvor displayet viser: 
- Trykk  og  for å stille minutter.
- Trykk  for å bekrefte alle innstillinger.


NB: Klokka og dager vil gå til fabrikkinnstillinger ved strømbrytning.

#### 4.5 Velge program

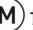Trykk på  for å velge program.

 Når man trykker på programvelgeren  vil den gå i en syklus som vist i bilde under.

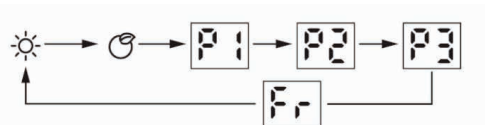

 **Komfort program:** Trykk  og  for å sette temperaturen fra 5-35 °C.

 **ECO program:** Trykk  og  for å sette temperaturen fra 1-31 °C.

**Fr** **Frostsikring:** Innstilt temperatur er 7 °C. Denne temperaturen kan endres.

**P1/P2/P3:** Forhåndsinnstilt program.

NB: Husk å stille inn dager og klokken før program velges.

P1: (Mandag-Søndag) Programmet kan ikke endres



P2:(Mandag-Fredag) Programmet kan ikke endres



P2:(Lørdag-Søndag) Programmet kan ikke endres















P3:(Mandag-Fredag) Programmet kan endres


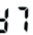



P3:(Lørdag-Søndag) Programmet kan endres








NB: P3 programmet kan endres.





1. Når P3 vises i displayet: Trykk  i mer enn 3 sek for å sette dag innstillingen.
2. Displayet viser , Trykk  og  for å sette  (mandag-søndag). Trykk  for å bekrefte, og nå kan klokken stilles.
3. Displayet vi ser , trykk  og  for å sette tiden fra 00-23. Trykk  for å velge program for hver time. (Komfort program , ECO program , Frostsikring **Fr**. Indikatorlampe vil ikke lyse).
4. Gjenta til programmet er satt for alle timer og dager.

NB: Etter at klokken 23:00 er satt trykk  for å komme tilbake til innstillinger for dag. Når displayet viser  trykk  for å avslutte innstillinger for **P3** programmet.

#### 4.6 Timer / slå av ovn etter X timer

Trykk  en gang og displayet viser blinkende "0H".  
Trykk  og  for å sette tiden fra 0 til 24 timer.  
Trykk  igjen for å bekrefte innstillingen. Indikator lampen  lyser.  
Ovnen slår seg av etter innstilt tid.

#### 4.7 Åpent vindu funksjon

Manuell bruk av funksjonen når du lufter.  
Trykk  en gang og lampen for åpent vindu  vil lyse.  
Når den er aktivert  vil indikatorlyset for funksjonen blinke og ovnen slutte og varme. Når man er ferdig med slår man av ved å trykke på .  
Ovnen returnerer til programmet.

#### 4.8 Strømbrydd ved bruk av de forskjellige program

Etter strømbrydd vil ovnen alltid gå til standby (av). Når man slår på ovnen bruker den komfort temperaturen.

#### Program P1, P2, P3:

Programmet ditt (P3) og klokken (P1, P2, P3) må stille på nytt. Komfort temperaturen er uendret.

**Komfort:** Bruker din satte temperatur.

**ECO:** Er programmet i ECO ved strømbrydd vil den gå til komfort temperatur. Da er temperaturen 4 grader høyere enn den var i ECO.

**Frostsikring:** Bruker komfort temperaturen.

**Åpent vindu aktiv:** Bruker komfort temperaturen.

## 5.0 Stell og vedlikehold

### 5.1 Enkel rengjøring

1. Slå av bryteren og ta støpselet ut fra stikkontakten. Sørg for at ovnen er avkjølt før rengjøring.
2. Rengjør utsiden med en myk, fuktig klut, med eller uten mild såpe.
3. Bruk aldri skurende rengjøringsmidler eller senk ovnen i vann eller andre væsker. Ikke la vann eller andre væsker komme inn i ovnen da dette kan skape brann og/eller elektrisk fare.
4. Vi anbefaler også periodisk rengjøring av ovnen med støvsuger for å fjerne støv eller skitt som kan ha samlet seg utenfor ovnen.

**ADVARSEL:** Ikke bruk sterke rengjøringsmidler, kjemiske rengjøringsmidler eller løsemidler da de kan skade ovnens overflater og plastkomponentene.

## 6.0 Samsvar / Årsvirkningsgrad

Produktet er i overensstemmelse med EUs regelverk for Ecodesign Direktiv 2009/125/EC for energirelaterte produkter. Tekniske parameter målt og kalkulert.

Modellbetegnelser	P nom kW	P min kW	P max,c kW
Beha Classic HC 5	0,5	0,5	0,5
Beha Classic HC 10	1	1	1
Beha Classic HC 15	1,5	1,5	1,5
Beha Classic HC 20	2	2	2
Pnom kW: Nominell varmeytelse Pmin kW: Minste varmeytelse (veiledende) Pmax,c kW: Største kontinuerlige varmeytelse			

Ekstra strømforbruk	elmax kW	elmin kW	eISB kW
Beha Classic HC 5	N/A	N/A	0,0004
Beha Classic HC 10	N/A	N/A	0,0004
Beha Classic HC 15	N/A	N/A	0,0004
Beha Classic HC 20	N/A	N/A	0,0004
elmax: Ved nominell varmeytelse elmin: Ved minimum varmeytelse eISB: Effektbehov i hviletilstand			

### 6.1 Teknisk parameter

F2 og F3 er korreksjonsfaktor som står for et positivt bidrag til den sesongmessige energi-effektiviteten for romoppvarming. Sesongbasert romoppvarmings energi-effektivitet for elektriske veggmonterte varmeovner, med en nominell varmeeffekt over 250W, skal ikke være mindre enn 38%.


Type varmeytelse/romtemperaturregulering (velg én type) F2		
Ett trinns varmeytelse uten romtemperaturregulering		
To eller flere manuelle trinn uten romtemperaturregulering		
Romtemperaturregulering med mekanisk termostat		
Elektronisk romtemperaturregulering		
Elektronisk termostat dag timer		
Elektronisk termostat og uke timer	ja	7

Andre reguleringsmuligheter (flere muligheter kan velges) F3		
Romtemperaturregulering med tilstedeværelse detektor		
Romtemperaturregulering med detektor for åpent vindu	ja	1
Begrensing på driftstid	ja	1
Med tilpasning av starttidspunkt		
Med mulighet for fjernstyring		
Svart kulesensor		

Energi effektivitet for Beha Classic HC XX ovner: 38%.

## 7.0 Avfallshåndtering

Dette apparatet er merket i henhold til EU-direktiv 2012/19/EU angående håndtering av elektrisk og elektronisk avfall (Waste Electrical and Electronic Equipment-WEEE). Sørg for at dette produktet avhendes på riktig måte, slik at det ikke utgjør en helse- eller miljørisiko.

Symbolet  på produktet eller på dokumentene som følger med det, viser at dette produktet ikke må behandles som husholdningsavfall. Lever det til et autorisert mottak for resirkulering av elektrisk og elektronisk utstyr. Avhenting må skje iht. de lokale renova-

sjonsforskriftene. For nærmere informasjon om håndtering, kassering og resirkulering av dette produktet, kontakt kommunen, renovasjonsvesenet eller forretningen der du anskaffet det.

### 7.1 Resirkulering av innpakning

Komponent	Materiale	Resirkulering
Emballasje	PAP 20	Papp og papir
Skrue pose	PE	Plast



## CONTENT

1.0 Technical information	9
2.0 Safety information	10
3.0 Installation	11
4.0 Using the heater	11
5.0 Care and maintenance	13
6.0 Energy efficiency	13
7.0 Waste management	14

Please read the manual carefully before use of the heater and save it for later reference. This user guide is also available at beha.no.

## 1.0 Technical information

Factory set temperature is 22 °C. The thermostat can be set at min. 1 °C in ECO mode. Maximum temperature is 35 °C.

The heater is IP24 tested and approved for installation in bathrooms and utility rooms, and can be installed according to current regulations. The heater has week timer that can be used for saving energy.

### 1.1 By power outage

The heater returns to your set comfort temperature. For other modes/settings see chapter 4.8.

### 1.2 Open window detection

If the open window function is activated and the temperature drops several degrees, within several minutes, the heater will activate this function and stop heating. After 1 hour the heater return to the mode/settings it had before the open window was activated. It can also be deactivated with pressing the open window button.

## 2.0 Safety information

When using any electrical appliance, basic precautions should always be followed to reduce the risk of fire and injuries.

**Please read the entire user manual before using heater.**

1. Before use, remove all packaging.
2. Turn the switch to OFF. Remove the plug from the wall socket when the heater is not in use and when cleaning.

**This heater is for room heating.**

**CAUTION! Parts of this product will become hot and may cause burns. Pay especially attention where children and vulnerable people are present.**

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.



**Warning: In order to avoid overheating, do not cover the heater.**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised. Furthermore, do not use the heater in areas

where gasoline, paint, or flammable liquids are used or stored. The heater shall not be used in explosives areas.

**Warning:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

The wall socket in which the heater is connected should be visible and accessible.

The heater must not be located immediately below a wall socket. Do not operate any heater with a damaged cord or plug. The cable must not come into contact with hot surfaces of the heater during operation.

Do not cover the cord with carpets. Do not step on the cable.

Ensure that no foreign objects are placed in the heater's air outlets as it can cause electrical failure or fire.

When cleaning or relocating or when the heater is not in use, the heater should be switched off and the cord unplugged. In that order. Do not remove the plug from the socket by pulling the cord. Remove the cord from the socket by gripping the plug and gently pull it out of the wall socket.

Do not touch the heater with wet hands.

The heater must be in an upright position.

The heater should not be repaired, dismantled or modified by unauthorized personnel. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool. Fixed heaters are to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

 
Do not use this heater if it has been dropped or if there are visible signs of damage to the heater.

**Warning:** The heater should be located away from furniture, curtains or other flammable objects.

**Warning:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout,

this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

## 3.0 Installation

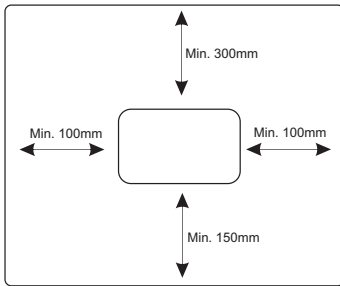


Make sure that the distance from walls and objects is respected.

### 3.1 Electrical connection and use

 Before connecting, please ensure that the voltage is 230-240V ~ 50-60 Hz. The heater should be connected to a socket in the room it is intended to be used. Do not connect the heater to sockets in adjacent rooms using an extension cable.

### 3.2 Mounting the heater

- A. Put the hanging rack on the wall as a guide ruler (please make sure the holes are parallel), use a pen to mark the hole position
- B. Drill holes on the wall with 8mm drill bit and insert the plastic wall plug.
- C. Fasten the hanging rack on the wall with the screws, do make sure the hanging rack is in correct direction
- D. Gently insert the heater body of the bottom to the hanging rack first and then push the heater body to be hooked on the whole hanging rack.

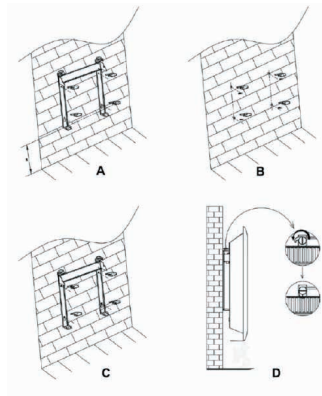

**Warning!** The distance from the floor to the lower edge of the heater should be min. 15cm.

**Warning!** When drilling holes, always ensure there is no wiring, pipework, etc. in the area to be drilled.


**Warning!** Before plugging in the unit make sure the radiator is properly attached to the wall.

### 3.3 Heater sizes

 Product name	Watt	Height (mm)	Width (mm)	Depth (mm)
Beha Classic HC 5	500	435	515	105
Beha Classic HC 10	1000	435	515	105
Beha Classic HC 15	1500	435	645	105
Beha Classic HC 20	2000	435	815	105

## 4.0 Using the heater


### 4.1 Control panel

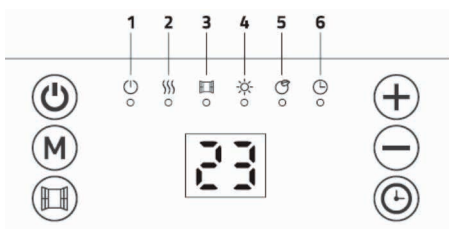

	Standby
	Mode selection
	Open window function
	Increase function
	Decrease function
	Timer

- ① Standby: on/off
- ② Heating status
- ③ Open window function
- ④ Comfort mode
- ⑤ ECO mode
- ⑥ Timer


### 4.2 How to use the heater

Plug the appliance to AC 230-240V 50-60Hz socket and press down the on/off switch with a beep sound. The indicator light  is on.




### 4.3 Factory default

- Heating mode: comfort mode
- Target temperature setting: 22 °C
- Date: 1 (Monday); Time: 00:00 (Off)
- Window open function: Off
- Timer: Off










If default settings are different, it will simply be because the unit has been quality tested after production.

To stop the heater working, press  to turn off the heater. Unplug the product when it's not in use.

### 4.4 Clock and day of week setting

Press down  3 secs to enter clock and day of week setting. The screen now display "d", press  and  to select the day from 1-7.


1. Monday
2. Tuesday
3. Wednesday
4. Thursday
5. Friday
6. Saturday
7. Sunday

 
- Press  to confirm day setting and enter the clock hour setting, with the screen display: 
- Press  and  to set the current hour.
- Press  to confirm hour setting and enter the minute setting, with the screen display: 
- Press  and  set the current minute.
- Press  to confirm all settings.




Note: The clock and calendar will be reset to factory default if without power supply.




### 4.5 Heating mode

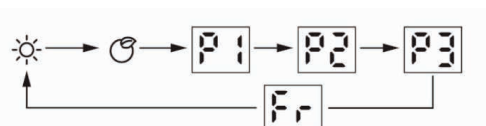Press  to enter mode selection.

By pressing  heating mode runs in a continuous cycle as below:

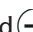

 **Comfort mode:** Press  and  to set the temperature from 5-35 °C.

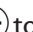 **ECO mode:** Press  and  to set the temperature from 1-31 °C.

*Fr* **Anti-frost mode:** The screen display. The target temperature 7 °C. The temperature can't be adjusted.

**P1/P2/P3:** Pre-set heating program.

Note: If the clock and day setting are not finished, the first time to enter P1/P2/P3 program setting, it is required to set day and clock setting in advance.

P1:(Monday-Sunday) Unadjustable program



P2:(Monday-Friday) Unadjustable program



P2:(Saturday-Sunday) Unadjustable program
















P3:(Monday-Friday) Adjustable program



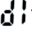



P3:(Saturday-Sunday) Adjustable program



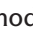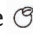

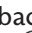


Note: P3 are adjustable program setting.





1. When under P3 mode, press  over 3 secs to enter day setting.
2. The screen displays , press  and  to set from - (Monday-Sunday). Press  to confirm and enter hour setting.
3. The screen displays , press  and  to set from 00-23. Press  to choose heating mode for every hour (Comfort mode  or ECO mode  or anti-frost mode *Fr*. The indicator light will not be on.)
4. Repeat the operation until you have completed the schedule of every hour and every day.

Note: After setting heating mode for hour 23, press  to come back to day setting. Note: when screen displays , press  finish all setting with display of .

#### 4.6 Timer off function

 Press  one time, the screen display “0H” and keeps flashing. Press  and  to set timer from 0-24 hours. Press  again to confirm setting, then the indicator light  is on. The heater will turn off after the set amount of time has passed.
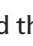
#### 4.7 Open window function

Press  one time and the indicator light  is on. If open window function is activated, the indicator light  keeps flashing and stops heating. Press  again to quit open window function and back to previous working situation.

#### 4.8 By power outage with different heating mode

After a power cut the heater will be in standby (off). When turning the switch on, the heater will use the comfort temperature set by you.

#### Program P1, P2, P3:

Your schedule (P3) and time (P1, P2, P3) need to be set again. The comfort temperature will be the same.

**Comfort temperature:** Does not changes.

**ECO temperature:** Change to comfort mode and the temperature are 4 degrees higher than that in ECO mode.

**Anti frost temperature used:** The heater will start at comfort temperature.

**Open Window active:** The heater returns to comfort temperature set by you.

## 5.0 Care and maintenance

### 5.1 Easy cleaning

1. Turn the switch off and remove the power connection. Make sure the heater is cooled down before cleaning.
2. Clean the outside with a soft, moist cloth, with or without a mild soap solution.
3. Never use abrasive cleaners or submerge the heater in water or other liquids. Do not allow water or other liquids to get into the heater, as this could create a fire and/or electrical hazard.
4. We also recommend the periodic cleaning of this heater by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated outside the heater.

**CAUTION:** Do not use harsh detergents, chemical cleaners, or solvents as they may damage the surface finish of the plastic components.

## 6.0 Energy efficiency

This product complies with the EU regulations of the Ecodesign Directive (2009/125/EC) for energy-related products.

Model identifier	P nom kW	P min kW	P max,c kW
Beha Classic HC 5	0,5	0,5	0,5
Beha Classic HC 10	1	1	1
Beha Classic HC 15	1,5	1,5	1,5
Beha Classic HC 20	2	2	2
Pnom kW: Nominal heat output Pmin kW: Minimum heat output (indicative) Pmax,c kW: Maximum continuous heat output			

Auxiliary electricity consumption	elmax kW	elmin kW	eISB kW
Beha Classic HC 5	N/A	N/A	0,0004
Beha Classic HC 10	N/A	N/A	0,0004
Beha Classic HC 15	N/A	N/A	0,0004
Beha Classic HC 20	N/A	N/A	0,0004
elmax: At nominal heat output elmin: At minimum heat output eISB: In standby mode			

### 6.1 Technical parameter

F2 and F3 are correction factors that represent a positive contribution to the seasonal energy efficiency for space heating. Seasonal space heating energy efficiency for electric wall-mounted heaters, with a nominal heating output above 250W, shall not be less than 38%.


Type of heat output/room temperature control (select one) Correction factor F2		
Single stage heat output and no room temperature control		
Two or more manual stages, no room temperature control		
With mechanic thermostat room temperature control		
With electronic room temperature control		
Electronic room temperature control plus day timer		
Electronic room temperature control plus week timer	yes	7

Other control options (multiple selections possible) Correction factor F3		
Room temperature control, with presence detection		
Room temperature control, with open window detection	yes	1
With working time limitation	yes	1
With adaptive start control		
With distance control option		
With black bulb sensor		

Energy efficiency for Beha Classic HC XX heaters: 38%

## 7.0 Waste management

This appliance is marked in accordance with EU Directive 2012/19/EU regarding the handling of electrical and electronic waste (Waste Electrical and Electronic Equipment-WEEE). Make sure that this product is disposed in the correct manner, so that it does not constitute a health or environmental risk.

The symbol  on the product or on the documents accompanying the product, indicates that this product may not be treated as household waste. Hand it over to an authorized reception for recycling of electrical and electronic equipment. Disposal must take place in

accordance with the local waste disposal regulations. For further information, treatment, recovery, and recycling of this product, contact your local council, waste disposal service or the shop where you purchased it.

### 7.1 Resirkulering av innpakning

Component	Material	Recycling
Packaging	PAP 20	Carboard and paper
Screw bag	PE	Plastic



# BEHA

BEHA ELEKTRO AS  
Evjeløkka 3  
1661 Rolvsøy  
beha.no  
a part of Beha Group AS